



REAR FOOTPEG ADAPTER

8809

FITS: '07-UP YAMAHA V-STAR 1300, '06-UP ROADLINER AND STRATOLINER, '02-UP ROAD STAR WARRIOR

PARTS INCLUDED

- 2 Peg Adapters
2 "D" Spring Washer
1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of hex wrenches, combination wrenches or socket set and ratchet

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

STEP 2 Remove the socket head cap screw and nut securing the right side rear footpeg to the mount; set the socket head cap screw and nut aside, they will be re-used.

STEP 3 Remove the right side rear footpeg; set it aside, it will not be re-used.

ATTENTION: The detent spring and ball are under tension in the footpeg mount. Do not lose the detent spring or ball during removal.

-cont.-

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY
Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG
You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today-select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



**STEP 4** Carefully remove the spacer, detent plates, detent spring and detent ball; set the hardware aside, it will be re-used. See [PIC.1](#)

**STEP 5** Install the spacer and detent spring in the new footpeg adapter; place the detent ball over the spring and hold it in place with one of the detent plates. See [PIC.2](#). Ensure that the detent plate is oriented as shown in [PIC.1](#) and [PIC.2](#).

**STEP 6** Install the new footpeg adapters and the other detent plate in the footpeg mount; secure the footpeg adapter assembly with the socket head cap screw and nut from STEP 2. See [PIC.3](#).

**STEP 7** Repeat STEP 2 through STEP 6 for the left side.

**NOTE** The two "D" spring washers have been included in the hardware kit for use when there is excessive space between the adapter and mount. Replace the detent plate from Step 6 with the "D" spring washer in that instance.

**STEP 8** Install the new footpegs. Refer to the instructions included with the new footpegs for more information.

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.



**ATTENTION!** Determine the orientation of the footpeg before fully tightening the adjusting bolt. The footpeg adapter may leave marks in the footpeg when tightened down.

**STEP 9** Adjust the angle of the new footpegs by turning the setscrew (See [PIC.4](#)) in or out. Turn the setscrew in for a flatter angle and out for a steeper angle.

**STEP 10** Ensure proper clearance and operation before riding the motorcycle.

**WARNING!** IMPROPER INSTALLATION OR USE OF THIS PRODUCT COULD RESULT IN SERIOUS INJURY OR DEATH.

**CAUTION!** Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

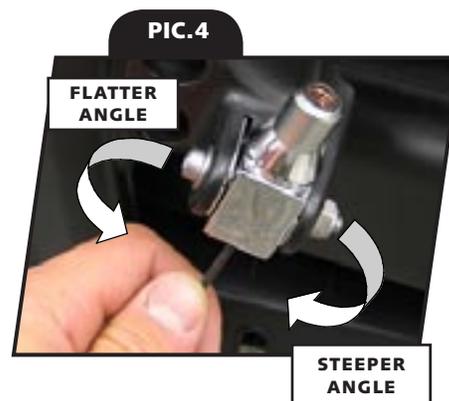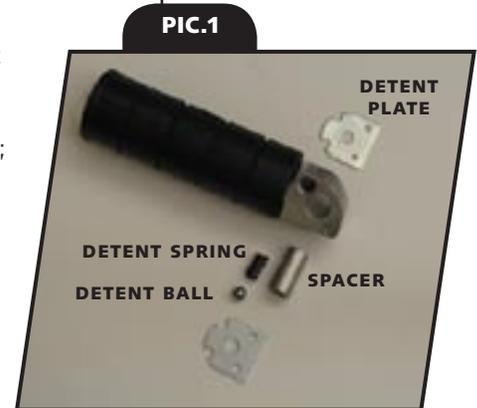

*Ride On!*